


IR REMOTE CONTROL

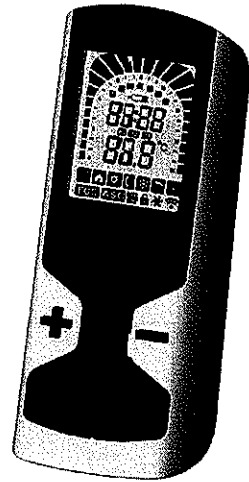

Installation and use instructions

IRSAP

creating your comfort

IRSAP SPA
 45031 Arquà Polesine (RO) Italy
 Tel. +39 0425 466611 - Fax +39 0425 466662
 Website: <http://www.irsap.com>
 E-mail: info@irsap.it




IR GROUP SARL
 19, Chemin de la Plaine 69390 Vourles (France)
 Tel. +33 04 28 00 01 67 - Fax +33 04 72 31 86 40
 Web: <http://www.irsap.com>;
 E-mail: irsaprhess@irgroup.fr

IRSAP-RHOSS Clima Integral, S.L.
 Oficina y Almacén: P.I. CAMI RAL
 Leonardo da Vinci, 4 08850 Gavà (Barcelona)
 Tel. 93 633 47 00 - Fax 93 633 47 04
 E-mail: www.informacion@irsap.com
www.irsap.com


IRROM Industrie S.R.L.
 Str. Principală 1/A, Sat Fundătara, Icolod 407336,
 jud. Cluj, România
 Tel: +40 (0)264 263400 - Fax: +40 (0)264 263404
 Web: www.irsap.ro

cod.1087M0418

DISPLAY

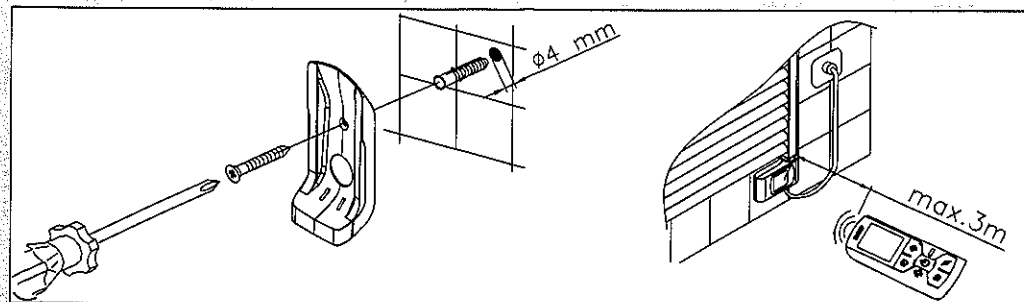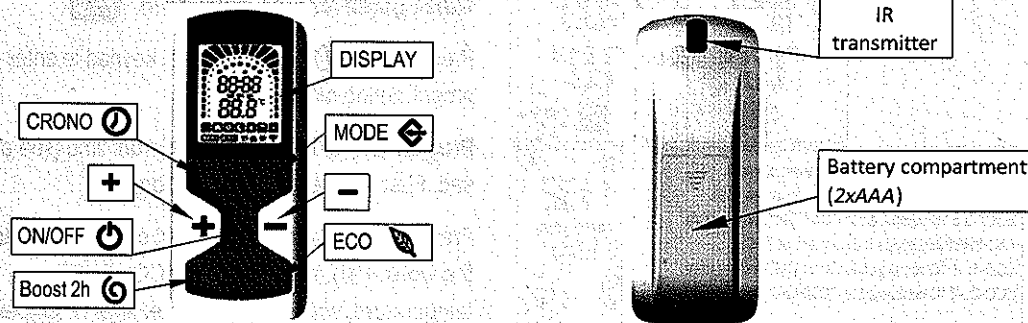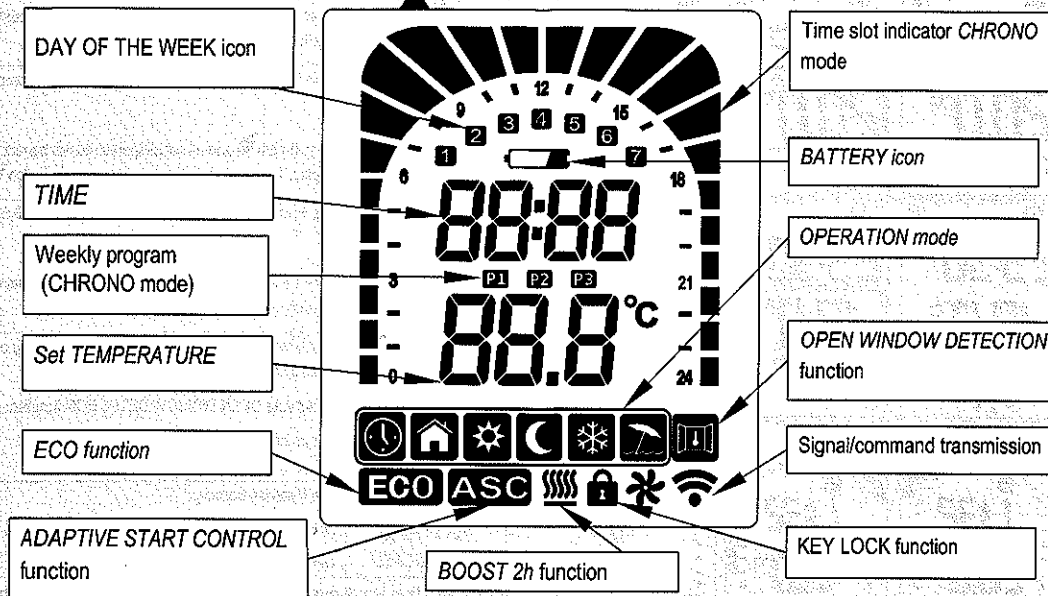

In the package

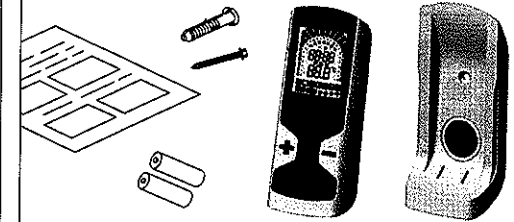

NOTE FOR OPERATION

The signal is transmitted by the remote control to the thermostat (on the radiator) after one second from the temperature/mode/function setting.

First remote control activation

Day of the week and time setting

Once batteries have been inserted, flashing day of the week and time icons will be displayed. Press button and with buttons **+** and **-** select day of the week from Monday to Sunday (from 1 to 7).



Press again and with buttons **+** and **-** select the time.



Power on/Stand-by

Press button to switch on remote control or activate the Stand-by mode. When remote control is functioning, current day and time, operating mode and set temperature are displayed.

Day and time are also displayed in Stand-by.

OPERATING MODES

Press button repeatedly to select desired operating mode. selectable icons are:

 COMFORT	<p>The COMFORT temperature corresponds to temperature desired by the user.</p> <p>Once COMFORT icon (A) is selected, use buttons + and - (settable temperature between 10 °C and 32 °C). (B)</p> <p>Set temperature, flashing communication symbol will appear with thermostat. (C)</p>			
 NIGHT/ REDUCED	<p>In NIGHT mode, set temperature is less than or equal to COMFORT temperature.</p> <p>Once NIGHT icon is selected (A), use button + and - (settable temperature between 10 °C and Comfort °C). (B)</p> <p>Set temperature, flashing communication symbol will appear with thermostat. (C)</p>			
 CHRONO	<p>In this mode you set different temperatures (COMFORT or NIGHT) during single days of the week.</p> <p>Once CHRONO icon is selected, press for at least 3s button repeatedly to toggle between P1, P2 and P3 (A, B)</p> <p>P3 is the only user-settable program. (C)</p> <p>P1 and P2 are already pre-set programs.</p> <p>To set program P3, see section Quick Guide to prog. in P3</p>			
 ANTIFREEZE	<p>ANTIFREEZE mode activates heating cartridge when ambient temperature drops below 7 °C.</p> <p>Once ANTIFREEZE icon (A) is selected, flashing communication symbol will appear with the thermostat. (B)</p>			
 FIL-PILOTE	<p>In FIL-PILOTE mode, the device is managed by a central control system that sets operating mode for the connected devices.</p> <p>Once FIL-PILOTE icon is selected, use buttons + and - to set temperature. (A)</p>	<p>STAND-BY: switches off the heating element. COMFORT: keeps temperature set by the user. ECO: -3.5 °C compared to COMFORT temperature. ANTIFREEZE: keeps temperature at 7 °C. ECO-1: -1 °C compared to COMFORT temperature. ECO-2: -2 °C compared to COMFORT temperature.</p>		
 HOLIDAY	<p>HOLIDAY mode activates ANTIFREEZE mode when temperature drops below 7 °C.</p> <p>Once HOLIDAY icon (A) is selected, use buttons + and - to set holiday days number (B). After the period, thermostat returns to COMFORT mode. (C)</p>			
 BOOST 2h	<p>BOOST 2h mode can be used to quickly heat a room.</p> <p>From any operating mode you can push button to activate BOOST 2h mode. (A)</p>	<p>The heating element is activated for 2 hours after which it returns to previous operating mode.</p> <p>The user can switch off BOOST 2h mode at any time by pressing button or .</p>		

FUNCTIONS

 KEY LOCK	<p>The user has the option to lock the keyboard.</p> <p>To activate KEY LOCK function press simultaneously buttons and + for at least 3s. To switch off this function, repeat the procedure.</p>	
 ECONOMY	<p>ECO function can be used to reduce power consumption when room is empty for a defined time.</p> <p>Press button and all set temperatures will be reduced by 3 °C, while ECO icon will appear on the display. To disable this function, press again button .</p>	
 ADAPTIVE START CONTROL	<p>This function allows the heating element to be switched on early respect to set time in Chrono mode.</p> <p>Once CHRONO mode is selected, press simultaneously for at least 3s buttons and +. To exit from this function, repeat the procedure.</p>	
 OPEN WINDOW DETECTION	<p>This function enables electronics to detect opening of a window and the thermostat can switch off radiator, the relative icon starts flashing.</p> <p>To activate OPEN WINDOW DETECTION function, press simultaneously buttons and - for at least 3s.</p> <p>To turn off the function, repeat the procedure.</p>	
 BATTERIE SCARICHE	<p>Low batteries warning.</p> <p>When batteries charge is low, the display shows the icon that recommends to replacing them as soon as possible.</p> <p>To turn off the function, repeat the procedure.</p>	

* This function is not available on all models of thermostats, check relative thermostat manual for function description

** Function enabled only in CHRONO mode.

***Function available only in COMFORT and NIGHT mode.

Quick guide for programming in P3


Press button on the control keypad to enter in P3 programming mode.

Program day of the week and current time (see also sec. First remote control activation).

Press again button and start programming day 1 of the week. (A). With + you set COMFORT temperature, while with - you set NIGHT temperature.

At each digit, you advance of one hour (B).

Pressing you go to next day (C).

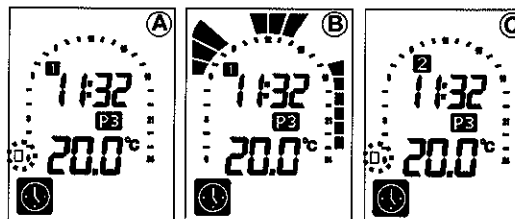

At the end of day 7 programming, push again button .

INFORMATION FOR USERS



in accordance with article 14 of the Directive 2012/19/EU of 07/07/2012 on waste electrical and electronic equipment.

- The symbol shown above, present also on the equipment, indicates that it has been placed on the market and that, when the user decides to get rid of it, it must be disposed of in separate waste collection (including all the components, sub-assemblies and consumer materials which are an integral part of the product).
- For information on the systems for collecting these appliances, please contact the company or another subject enrolled in the various National Registers for other countries in the European Union. Waste produced in the home (or of similar origin) may be consigned to systems for the separate collection of urban waste.
- When buying a new appliance of an equivalent type, it is possible to hand over the old equipment to the seller. The seller will then contact the subject in charge of the collection of the equipment.
- The appropriate separate collection of the scrapped equipment and the subsequent operations of processing, recovery and environment-compatible disposal, allows the avoidance of potential negative effects on the environment and on human health, while favouring the recycling and recovery of the component materials.

The unauthorised disposal of the product by the user entails the application of the sanctions contemplated under the national approval of Directives 2011/65/EU, 2008/98/EC and 2015/1127/EU.