


SEQUENZE




Istruzioni di montaggio ed uso
 Operation instructions
 Instructions de montage et usage
 Montage-und Bedienungsanleitung
 Instrucciones de montaje y uso
 Instrucțiuni pentru montare și utilizare

IRSAP




Accessori non inclusi-
 Accessoires non compris-
 Accessories not included-
 Zubehör nicht inklusive-
 Accesorios no incluidos-
 Accesorii neincluse

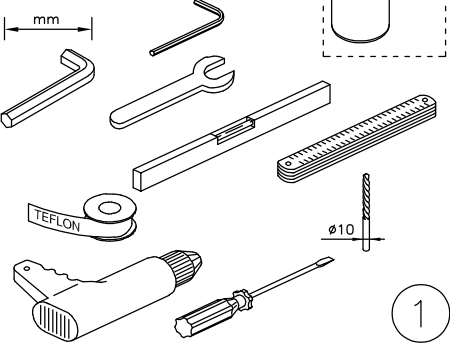




Accessori inclusi-Accessoires compris-
 Accessories included-Zubehör inklusive-
 Accesorios incluidos-Accesorii incluse

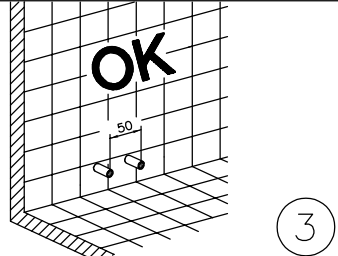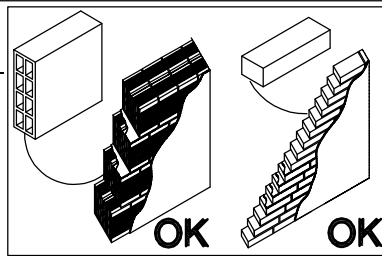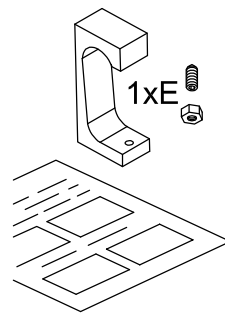

SEQUENZE L C=7
 SEQUENZE S C=5

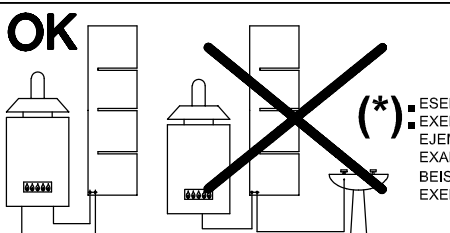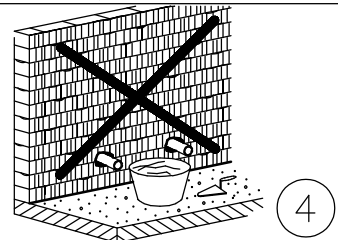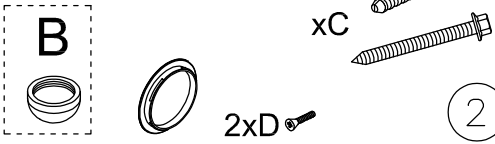

(*) ESEMPIO CON RADIATORE SEQUENZE L
 EXEMPLE AVEC RADIATEUR SEQUENZE L
 EJEMPLO CON RADIADOR SEQUENZE L
 EXAMPLE WITH SEQUENZE L RADIATOR
 BEISPIEL MIT HEIZKÖRPER SEQUENZE L
 EXEMPLU CU CALORIFERUL SEQUENZE L

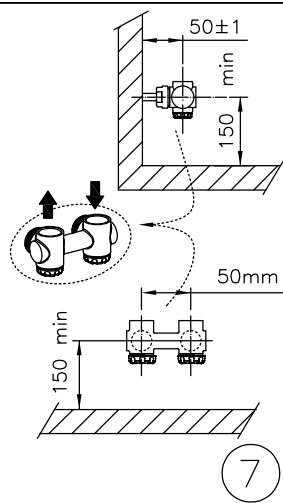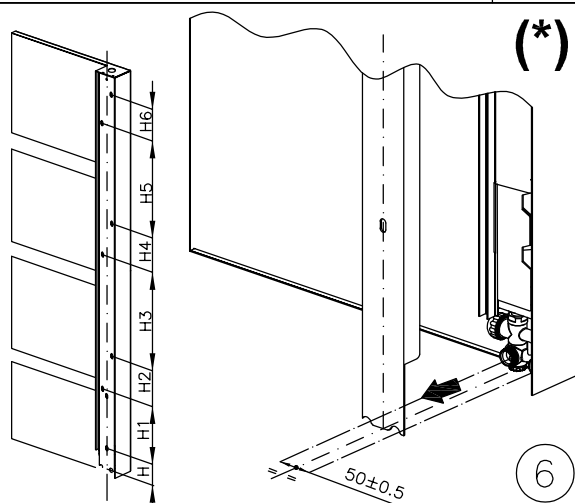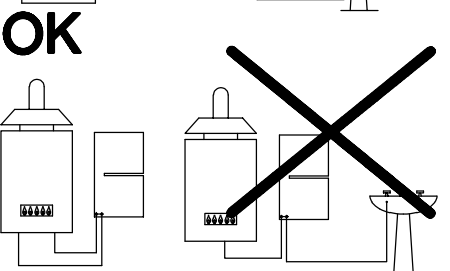

Service:
 BEMM GmbH
 Postfach 10 01 44
 D-31101 Hildesheim
 Fon +49(0) 51 21 / 93 00 - 0
 Fax +49(0) 51 21 / 93 00 84
 eMail info@bemm.de

